

Figure 1

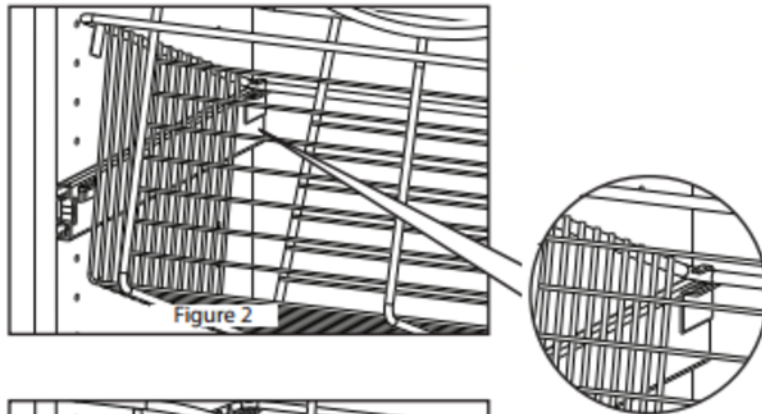


Figure 2

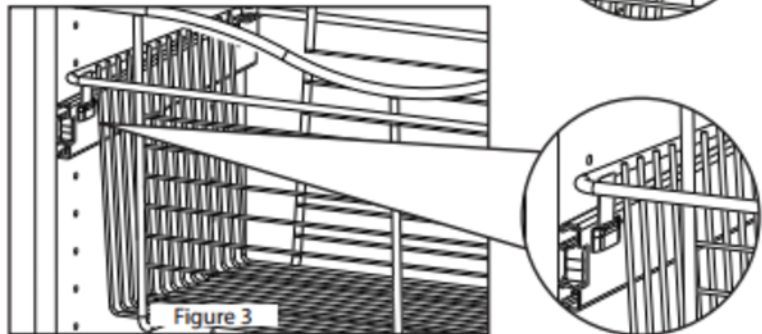


Figure 3

## Chrome Basket Installation

Tools Needed: Philips screwdriver

Separate slide by extending and depressing plastic tab.

Install outer slide (small section) using euro screw (pictured below), starting with the first hole in slide toward front of partition, second screw will align with rear partition hole.

Guide inner slide (large section) onto outer slide completely (figure 1).

While tilting the basket, align the second from top wire into hooks at rear of slide assembly (figure 2).

Lower the front of the basket and align the 2 tabs with the slots in the front of the slide assembly (figure 3).



Euro Screw

LIFESPAN  
closets  
*organize your life*